


# BMAC EASY GLIDER 1.6 Meter

*Cut holes for servo leads to exit on the underside.  
 Install pull through strings.  
 Butt join the two panels.  
 Cover joint with three raps of 50% overlapping  
 Fiberglass reinforced Tape*

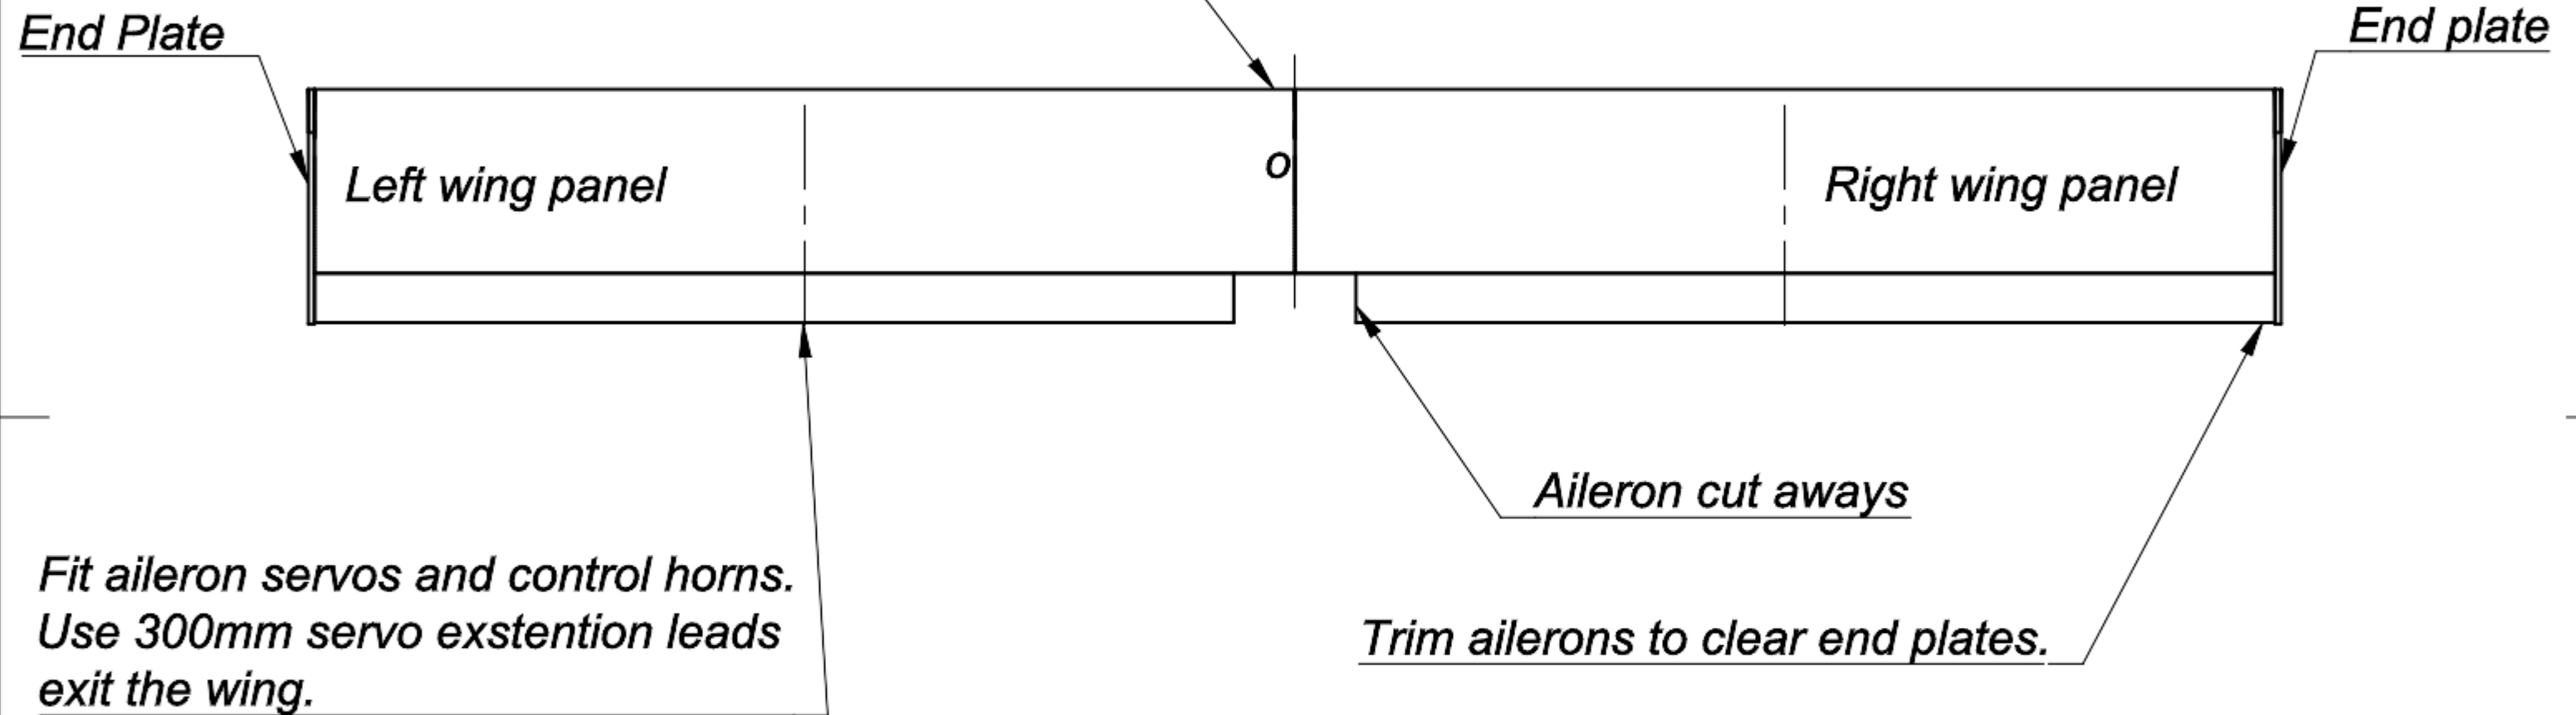

*Fit aileron servos and control horns.  
 Use 300mm servo exstention leads  
 exit the wing.*

*Trim ailerons to clear end plates.*

Dept.	Technical reference	Created by <b>Roy Thompson 24/01/24</b>	Approved by	
<b>Material: Vitrex Premier                  Underlay Board                  5 x 600 x 856mm                  Foam Sheets.</b>		Document type <b>Wing Construction</b>	Document status	
		Title <b>BMAC                  Easy Glider                  1.6 Meter</b>	DWG No. <b>2 of 2</b>	
		Rev.	Date of issue	Sheet <b>1/1</b>